

## Keys

### n Electronic key



Smart access system with push-button start  
(→P.10, 21)

\*: If equipped

### n Mechanical key




- 1 Locks and unlocks the doors
- 1 Opens the trunk
- 1 Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or if equipped with a card key, press the button and pull.

### n Wireless remote control



- 1 Locks the doors
- 2 Unlocks the doors
- 3 Opens the trunk
- 4 Sounds the alarm  
(To stop the alarm, push any button on the wireless remote control.)

The wireless remote control can also be used to open the windows and moon roof.  
To do so, simply press and hold  button.

## Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the engine by simply carrying the electronic key in your pocket or bag. For details on starting the engine, see page 21.

### Entering the vehicle



To unlock the vehicle, simply grasp the door handle.

### Exiting the vehicle



To lock the vehicle, press the button on the door handle.

### Opening the trunk



To open the trunk, press the button.

For details on what to do when the electronic key does not operate properly, see page 60.

## Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

### n Immobilizer system



The immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key. The security indicator light flashes to indicate that the system is set.

### n Alarm

The system sounds the alarm and flashes light when an attempt to steal the vehicle is detected.

**To set the alarm:** close the doors, trunk and hood, and lock all doors. The indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

**To deactivate or stop the alarm:** turn the "ENGINE START STOP" switch to the ACCESSORY or IGNITION ON mode, or unlock the doors or trunk.

### n Steering lock



The steering lock is engaged when the driver's door is opened with the "ENGINE START STOP" switch OFF.